


IBM

IBM 5110
Language Support
Maintenance Information Manual

5110

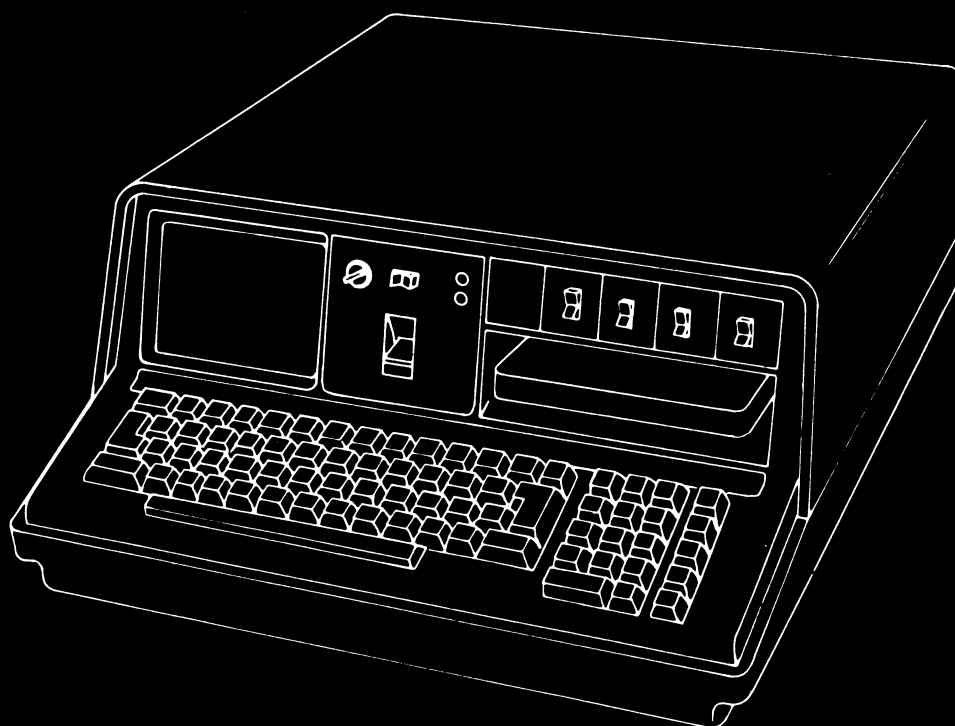

IBM 5110
Language Support
Maintenance Information Manual

Preface

This manual is intended to be used by IBM 5110 service personnel who have problem determination as part of their maintenance responsibility. Service personnel are assumed to have completed the 5110 training course, and to have knowledge of the BASIC language and some familiarity with APL. This manual reviews some diagnostic techniques for locating errors in user's code and contains procedures for reporting problems.

Related Publications

- *IBM 5110 APL Reference Manual*, SA21-9303
- *IBM 5110 APL Reference Card*, GX21-9304
- *IBM 5110 BASIC Reference Manual*, SA21-9308
- *IBM 5110 BASIC Reference Card*, GX21-9309
- *IBM 5110 Computer Maintenance Information Manual*, SY31-0550
- *IBM 5110 Customer Support Functions Reference Manual*, SA21-9311

First Edition (January 1978)

Changes are continually made to the information herein; any such changes will be reported in subsequent revisions or technical newsletters.

Requests for copies of IBM publications should be made to your IBM representative or the IBM branch office serving your locality.

A Reader's Comment Form is at the back of this publication. If the form has been removed, address your comments to IBM Corporation, Publications, Department 245, Rochester, Minnesota 55901. Comments become the property of IBM.

MANUAL ORGANIZATION	1	IMF PROCEDURES	13
LANGUAGE DIAGNOSTIC TOOLS	3	Loader Program	13
BASIC and APL	3	Load IMFs	14
Clear read/write storage.	3	Copy IMFs	15
Load stored programs or user-defined functions and/or variables into read/write storage.	3	Key-Enter IMF	16
Copy stored programs or user-defined functions and/or into read/write storage.	4	Display ECs	16
Write the contents of read/write storage on tape or diskette.	4	End of Job	17
Print a listing of the user's program or user-defined function.	4	MICROCODE TROUBLE REPORT	19
Turn on program trace or function trace.	5	The MTR Form	19
Stop program trace or function trace.	5	Collecting Information to Support the MTR	23
Suspend execution of a program or a function.	6	Dumping Lower Read/Write Storage	24
Resume execution of a suspended program or a suspended function.	7	DATA RECOVERY FROM MEDIA ERRORS	25
End controlled program suspension or function stop control.	7	APPENDIX A. GRAPHICS AND CODE TRANSLATION	
Replace a statement in a program or a function.	7	TABLES	27
Insert a statement in a program or a function.	8	Domestic Graphics Table	28
Delete a statement from a program or a function.	8	World Trade Graphics Table	29
Display intermediate results of a complex operation.	9	Code Translation Table in EBCDIC Sequence	30
What is the hierarchy or order of execution of operators.	10	Code Translation Table in Atomic Vector and Z-Code Sequence	32
APL Only.	11	Code Translation Table in ALC Sequence	34
Erase global objects (user-defined functions or variables) from active workspace.	11	INDEX	35
Replace the active workspace with a stored workspace.	11		
Change the active workspace ID.	11		
Display the names of the user-defined functions in active workspace.	11		
Display the names of global variables in active workspace.	11		
Display the state indicator.	11		
Display the state indicator and the name of the local variables in each suspend or pendent function.	11		
Display the number of symbols allowed in active workspace and the number of symbols currently in use.	12		
Display the number of unused bytes in active workspace.	12		
Display the number of the next statement to be executed in a suspended function.	12		
Expunge (erase) a user-defined function or a global variable.	12		
Load a continued file into active workspace (written with a)CONTINUE command).	12		
Verify that a name is available for use as a global variable name.	12		



•

•



•

•



The first section of this manual presents a review of the language diagnostic tools that are most frequently needed in locating problems in a user's program or user-defined function. The information contained in this section is extracted and condensed from the *IBM 5110 BASIC Reference Manual* and the *IBM 5110 APL Reference Manual* and is not intended to replace any part of either of these manuals.

The second and third sections describe IMF procedures and the use of the microcode trouble report form.

The fourth section of this manual offers hints about recovering data from tape and diskette when normal operation results in media error messages.

The appendix contains charts of the graphics for the IBM 5110 and code translation tables for the character codes used in the IBM 5110.



4

4



4

4



If the user's program (BASIC) or the user-defined function (APL) fails to yield the expected results, and the system diagnostics run correctly, suspect a logic error in the user's statements. Have the user demonstrate the failure and explain the expected result to you. If an error message is displayed, consult the appropriate language reference manual, *IBM 5110 BASIC Reference Manual* or *IBM 5110 APL Reference Manual*. If the program or function stops, hangs in a loop, or produces incorrect output, you will need to use some of the diagnostic tools that are reviewed in the following charts.

The charts are organized in task/action and question/answer format. When a task or a question applies to both APL and BASIC, actions for both APL and BASIC are specified. When appropriate, examples are provided for quick reference. In examples that require the name of an APL user-defined function, HOWTO has been used as the function name. Replace HOWTO with the name of the customer's user-defined function.

BASIC AND APL

Clear read/write storage.

BASIC

Enter LOAD 0

and press EXECUTE.

Only IMFs and feature programs remain in read/write storage.

APL

Enter)CLEAR

and press EXECUTE

Only IMFs and feature programs remain in read/write storage.

Load stored programs or user-defined functions and/or variables into read/write storage.

BASIC

Use the LOAD command.

APL

Use the)LOAD command.

Copy stored programs or user-defined functions and/or variables into read/write storage.

BASIC

Use the MERGE command. This command merges by statement number. The program loaded with the MERGE command will not overlay a program that already exists in read/write storage unless the statement numbers already in read/write storage are the same as the resultant statement numbers being merged.

APL

Use the)COPY command or the)PCOPY command. The)PCOPY command will not overlay a function or a variable of the same name that already exists in the active workspace.

Write the contents of read/write storage on tape or diskette.

BASIC

Use the SAVE command.

APL

Use the)SAVE command or the)CONTINUE command. You can continue, but cannot save, an active workspace that contains a suspended function.

Print a listing of the user's program or user-defined function.

BASIC

Enter LIST PRINT

and press EXECUTE.

To display a listing, omit the print parameter.

APL

Enter VHOWTOC[]V

and press EXECUTE.

If nothing prints, although the listing is displayed, enter)OUTSEL ALL

and press EXECUTE. Then reenter the above.

Turn on program trace or function trace.

BASIC

Enter RUN TRACE, PRINT

and press EXECUTE,

or

enter GO TRACE

and press EXECUTE.

APL

To activate trace for steps 4, 5, 6, and 7,

enter TΔHOWTO←4 5 6 7

and press EXECUTE.

To trace all of the steps that are executed in the first seven steps,

enter TΔHOWTO←\7

and press EXECUTE. Then enter the function name and arguments (if required), and press EXECUTE to start execution of the function.

Stop program trace or function trace.

BASIC

Enter GO RUN

and press EXECUTE,

or

enter GO STEP

and press EXECUTE.

APL

Enter TΔHOWTO←\0

and press EXECUTE.

Suspend execution of a program or a function.

BASIC

To stop after statement 0030 and before statement 0040,

enter 0035 PAUSE

and press EXECUTE.

To stop after executing each statement,

enter RUN STEP

and press EXECUTE.

or

enter GO STEP

and press EXECUTE.

To stop anywhere in the program,

press ATTN.

APL

To stop before statement 3 and before statement 5, use stop control.

Enter SAHOWTO←3 5

and press EXECUTE.

To stop anywhere within an executing function,

press ATTN.

If the cursor is at the leftmost position of line 1 of the display screen, or is on a line that already contains text, the system is probably asking for alphabetic input (quad quote input). Escape by entering the out character (␣).

If the cursor is on a line following a quad colon (␣:), the system is asking for numeric input. Escape by entering a right arrow (→).

If the system is in shared variable display mode, the cursor can be positioned anywhere on the screen. To escape from this condition, press EXECUTE and then press ATTN.

Leaving a program or function suspended can make a tape output file or a diskette output file unusable.

Resume execution of a suspended program or a suspended function.

BASIC

Press EXECUTE

or

enter GO

and press EXECUTE.

or

enter GO 0060

and press EXECUTE.

APL

Enter →□LC

and press EXECUTE.

To resume function execution with statement 13,

enter →13

and press EXECUTE.

End controlled program suspension or function stop control.

BASIC

If the program suspension is due to a PAUSE statement, delete the PAUSE statement. If the program suspension is due to the program executing in step mode,

enter GO RUN

and press EXECUTE,

or

enter GO TRACE

and press EXECUTE.

APL

Enter SAHOWTO←10

and press EXECUTE.

Replace a statement in a program or a function.

BASIC

To replace statement 0040 with a statement that assigns the value 653 to Z,

enter 0040 LET Z=653

and press EXECUTE.

APL

To replace statement 4 with a statement that assigns the value 653 to Z,

enter VHOWTOC4JZ←653V

and press EXECUTE.

Insert a statement in a program or a function.

BASIC

To insert a statement between step 0060 and step 0070,

enter 0065

followed by the new statement, and press EXECUTE.

APL

To insert a statement between step 6 and step 7,

enter VHOWTOC6.13

followed by the new statement.

Then enter V

and press EXECUTE.

Renumbering of statements is automatic. Any branch to a line number that follows the inserted statement should be corrected. Always branch to a label.

Delete a statement from a program or a function.

BASIC

To delete statement 0045,

enter 0045 DEL

and press EXECUTE.

To delete all statements from 0045 through 0090,

enter 0045 DEL 0090

and press EXECUTE.

APL

To delete statement 4,

enter VHOWTOC403

and press EXECUTE.

The system then displays statement 4. Verify that the displayed statement is the one to be deleted.

Press ATTN.

Then press EXECUTE.

Then enter V

and press EXECUTE to close the function.

Because renumbering is automatic, display the statement to be deleted to be sure it is the right one. Avoid branches to a line number. Branch to a label rather than to a line number.

Display intermediate results of a complex operation.

BASIC

Insert PAUSE statements. While program execution is suspended, you can display the variables by entering the variable names and pressing EXECUTE.

or

Insert PRINT statements to display the variables.

or

Break a complex statement into several shorter statements. Choose any variable names that you introduce carefully to avoid changing the value of an existing variable. Also, be aware of the hierarchy of BASIC arithmetic operators.

APL

Suspend the user-defined function between successive lines in the complex operation. While execution of the function is suspended, you can display the variables by entering the variable names and pressing EXECUTE.

or

If the complex operation is specified in a single statement, break the operation into shorter statements. Insert the shorter statements following the original statement, and then delete the

or

Replace the complex statement with `[]←` embedded in the statement to display the results you need. The results are displayed in the order of execution. The values displayed are the results of the operations to the right of the `[]←` characters.

```
155+[]←( []←40÷8 )×[]←3+4
```

```
7
5
35
190
```

What is the hierarchy or order of execution of operators?

BASIC

Arithmetic expressions are evaluated according to the hierarchy of the operators involved. Operations enclosed in parentheses are performed first. Operations with a higher priority level are performed before those with a lower priority level. Operations at the same priority level are performed from left to right. The hierarchy of the operators is:

Operator	Hierarchy
1. Enclosed in parentheses	Highest
2. \uparrow or $**$	
3. Positive (+) and negative (-)	
4. $*$ and $/$	
5. Addition (+) and subtraction (-)	Lowest

APL

APL expressions are evaluated from right to left until a right parentheses is encountered. The expression enclosed in parentheses is then evaluated from right to left.

APL ONLY

Erase global objects (user-defined functions or variables) from active workspace.

Use the)ERASE command.

Replace the active workspace with a stored workspace.

Use the)LOAD command.

Change the number of symbols allowed in the active workspace.

Use the)SYMBOLS command. See the *APL Reference Manual* for the required procedure.

Change the active workspace ID.

Use the)WSID command.

Display the names of the user-defined functions in active workspace.

Enter)FNS and press EXECUTE.

Display the names of global variables in active workspace.

Enter)VARS and press EXECUTE.

Display the state indicator.

Enter)SI and press EXECUTE. The display lists the suspended and pendent functions in reverse order of occurrence (last, first). The line number of the last statement executed in a pendent function is displayed, and the line numbers of the next statement to be executed in a suspended function is displayed. An asterisk flags suspended functions.

Display the state indicator and the names of the local variables in each suspended or pendent function.

Enter)SINL and press EXECUTE. Except for the addition of the names of local objects (functions, variables, and labels), this display is identical to that in response to the)SI command.

Display the number of symbols allowed in active workspace and the number of symbols currently in use.

Enter `)SYMBOLS` and press EXECUTE.

Display the number of unused bytes in active workspace.

Enter `[]WA` and press EXECUTE.

Display the number of the next statement to be executed in a suspended function.

Enter `[]LC` and press EXECUTE.

Expunge (erase) a user-defined function or a global variable.

Enter `[]EX 'name'` and press EXECUTE. (If a suspended or pendent function in the active workspace has a local object with the same name as the global variable, the global variable cannot be accessed or expunged. An attempt to expunge the global object, or to assign a new value to the global variable, results in action on the local variable in the previously suspended function.)

Load a continued file into active workspace (written with a)CONTINUE command).

Use the)RESUME command if you want to have the same I/O active as when the workspace was continued. Otherwise, use)LOAD.

Verify that a name is available for use as a global variable name.

List the function that is to contain the name to ensure that the name is not specified in the function header as a local variable. Then enter `[]NC NAME` and press EXECUTE. If the result 0 is displayed, enter `)VARS NAME`. If the first name in the resulting display response is not the name entered, then enter `)FNS NAME`. If the first name returned in the resulting display is again not the name entered, the name is available for use as a global name.

An IMF (internal machine fix) provides a solution to a specific code problem in read-only storage (ROS) including executable ROS. If a system application fails and an MTR (microcode trouble report) is submitted, plant personnel analyze the problem, and if required, an IMF is generated and distributed.

IMFs, if any, are contained in a separate IMF tape cartridge or diskette, which is supplied to the customer as IMFs are developed. Before it can be used, an IMF must be loaded into read/write storage. You can load IMFs by using the loader program, which is contained in file 1 of the customer support tape or diskette.

LOADER PROGRAM

The loader program allows you to add new IMFs to an IMF tape or diskette, to load a needed IMF into the system and then return to APL or BASIC, or to copy the IMFs to another tape or diskette. Another option allows you to display the EC level of the ROS modules in the system. (The EC levels of executable ROS are not displayed.) Use the LINK command (BASIC) or the)LINK command (APL) to load the loader program.

To load the loader program:

Insert the customer support tape or diskette into tape drive 1 or diskette drive 1.

Enter one of the following:

)LINK 1001	for tape and APL
)LINK 11001	for diskette and APL
LINK 1,E80	for tape and BASIC
LINK 1,D80	for diskette and BASIC

Then press EXECUTE.

After the loader program is loaded, the following prompt is displayed:

LOADER FUNCTION

OPTIONS:

1. LOAD FROM TAPE
2. LOAD FROM DISKETTE

ENTER OPTION NUMBER AND PRESS EXECUTE

Enter 1 if you loaded from tape, or enter 2 if you loaded from diskette. Leave the IBM-supplied customer support media inserted and press EXECUTE.

The next message is a prompt for drive number and for file number. Respond to this prompt with 1 for drive number and with 11 for file number. (File 11 of the IBM-supplied customer support tape or diskette is the IMF file. The file name is IMF.)

If another tape or diskette containing IMFs is to be used, insert that media and respond to the loader program prompts accordingly.

The loader program checks for file type 19 (decimal) and then displays the IMF option list below:

```
ENTER OPTION NO.  
1. DISPLAY EC'S  
2. COPY IMF'S  
3. LOAD IMF'S  
4. KEY ENTER IMF  
5. END OF JOB
```

LOAD IMFS

If you want to load IMFs, select option 3. The system prompts for the IMF file number with one of the following messages displayed:

```
ENTER FILE NUMBER      or      ENTER FILE NAME OR NUMBER  
      (tape)                      (diskette)
```

Enter the file number and press EXECUTE. Depending on the system (APL or BASIC), one of the following options lists is displayed:

```
ALL IMF'S ARE CLEARED      ALL IMF'S ARE CLEARED  
LOAD IS FOR THIS SYSTEM    LOAD IS FOR THIS SYSTEM  
ENTER LOAD OPTION NUMBER  or  ENTER LOAD OPTION NUMBER  
1. LOAD ALL BASIC IMF'S    1. LOAD ALL APL IMF'S  
2. LOAD IMF'S BY PROB #    2. LOAD IMF'S BY PROB #  
3. DISPLAY IMF PROBID'S    3. DISPLAY IMF PROBID'S
```

When you select option 3, the next display is in the format shown below (if there are any problem IDs).

```
PROBID  PROBID  PROBID  PROBID  PROBID  PROBID  PROBID  PROBID  
0001
```

PRESS EXECUTE TO CONTINUE

ENTER 4-DIGIT PROB # OR ENTER 0000 TO STOP

LOAD ERROR 482

ENTER 0 TO STOP OR 1 TO LOAD ANOTHER FEATURE

ENTER FILE NUMBER or ENTER FILE NAME OR NUMBER
 (tape) (diskette)

ID OF IMF OUTPUT FILE

```

ENTER SELECTED COPY OPTION NUMBER
1. COPY ALL IMF'S FOR XXXXX
2. COPY ALL XXXXX IMF'S FOR THIS SYSTEM
3. COPY IMF'S BY PROBLEM NUMBER
4. COPY XXXXX IMF'S BY PROB # FOR SYSTEM
5. COPY ALL APL,BASIC IMF'S FOR SYSTEM

```

Choose the option you need and follow the prompting messages.

KEY-ENTER IMF

By choosing option 4 in the initial display, you are allowed to enter an IMF with the keyboard. The system prompts for the IMF file number as shown:

ENTER FILE NUMBER or ENTER FILE NAME OR NUMBER
 (tape) (diskette)

Enter the IMF file number and press EXECUTE. The system returns the following instructions:

ENTER IMF. EACH LINE EXCEPT THE LAST MUST BE FULL.
PRESS EXECUTE AT THE END OF EACH LINE.

When you have finished entering the IMF, it is written to tape or diskette. The IMF can then be loaded into the system.

DISPLAY ECS

You can display the EC level of the ROS modules in the system by using the loader program on the customer support tape or diskette. Follow this procedure:

1. Load the loader program. (Follow the instruction in *Loader Program* in this section.)
2. Select option 1 in the IMF option list that displays.

The following illustration shows the format of the resulting display:

MOD	EC	MOD	EC	MOD	EC	MOD	EC	MOD	EC	MOD	EC	MOD	EC		
10	00	12	00	12	00	13	00	14	00	15	00	16	00	17	00
18	00	19	00	1A	00	1B	00	2F	A6	10	0A	F6	AA	1A	2A
B4	C3	D9	82	3F	A2	E1	E2	10	00	11	00	12	00	13	00
14	00	15	00	16	00	17	00	18	00	19	00	1A	00	1B	00
40	00	41	00												

If you want a printed copy of the module EC levels, use the COPY DISPLAY function.

END OF JOB

When you select option 5, end of job, the program returns the system to the loader, and the following prompt is displayed:

ENTER 0 TO STOP OR 1 TO LOAD ANOTHER FEATURE

Enter 0, and the system returns to BASIC or APL, ready for use.

This page intentionally left blank.

Microcode Trouble Report

The microcode trouble report (MTR), form number Z150-0038, provides a uniform notification procedure for reporting problems encountered in IBM microcode functions. The MTR form should be submitted to report:

- System errors when no cause can be found
- Incorrect results from verified correct procedures, for which there is no explanation or circumvention
- Incorrect results from verified correct procedures, for which there is circumvention

THE MTR FORM

The following is a copy of the MTR form and an explanation of the information required in the report.

IBM**M T R**

MICROCODE TROUBLE REPORT

INTERNAL USE ONLY

PREASSIGNED MTR SERIAL #

(A) CUSTOMER NAME		(B) CUSTOMER NO.		(J) MTR SUBMITTED		MTR IDENTITY	
				MO DAY YR			
(C) CUSTOMER MAILING ADDRESS				(K) SEVERITY CODE		ASSIGNED BY MTR CONTROL	
				1 2 3 4			
				(L) TYPE OF APPLICATION			
				(M) CPU Controller Storage Size Host Support Host Support REL Level Host Sys Trans Control Unit Prog Lev			
				(N) MICROCODE IN ERROR/SUSPECTED IDENTITY AND L/C LEVEL			
				ID NUMBER EC LEVEL REA/PATCH LEVEL			
(D) NAME							
MAILING ADDRESS							
				(P) MATERIAL SUBMITTED WITH MTR			
				MICROCODE STORAGE DUMP			
				INTERPRETIVE EXEC DUMP			
				DISK DUMP			
				CORE MAP			
				CUST SOURCE OBJECT			
				TEST DATA			
				SYSTEM LOG			
				DIAG OUTPUT			
				OTHER			
				(Q) SPECIAL ACTIVITIES			
(E) FE REGION BRANCH OFF NO (F) NO WORLD TRADE COUNTRY NAME							
(G) ITPS CODE				(H) IBM - BRANCH OFFICE PHONE			
				(R) SYMPTOM (S) FAILURE KEYWORD			
(T) ABSTRACT							

(V) Error description text — Note variations between expected and actual output — differences from previous successful runs — suspected problem area — verify EC level of hardware as adequate for microcode — special configuration, teleprocessing, I/O switching, multi-systems, etc. — identify any bypass, circumvention, or relief given.

Mail MTRs to:
IBM Corporation
5110 MTR Dept
Hwy 52 and 37th St. N.W.
Rochester, Mn 55901

DISTRIBUTION: 1,2 — MTR PROCESSING
4 — ORIGINATOR
3 — MTR PROCESSING

(W) SUBMITTERS NAME (Print) AND SIGNATURE

ORIGINATOR IS:
FE GSD OTHER

PAGE _____ OF _____
Z150-0038-0 (U/M 025)

Item	Description	Explanation
(A)	Customer name	Enter the full customer name.
(B)	Customer number	This number can be obtained from the territory maintenance analysis (TMA) report or from the sales office orders and movements group.
(C)	Customer mailing address	Use the complete customer mailing address.
(D)	Name and mailing address	Enter the name (not the title) of the person responsible for handling MTR correspondence. Print the address of the branch office where MTR correspondence can be directed. This address is used for any follow-up required to resolve this MTR.
(E)	Location number	Enter the branch office and region number.
(F)	World Trade countries	World Trade country name and country number.
(G)	ITPS	Enter the ITPS (internal teleprocessing system) code for the responsible branch office. This code is listed in the branch office field directory telephone listing.
(H)	Phone number	Branch office phone number or the MTR originator phone number.
(J)	MTR submitted	Enter month/day/year.
(K)	Severity	Four levels (1 through 4) of severity codes are used to reflect the customer engineer's appraisal of the customer's problem. The severity code is used to determine the priority in processing.
	Code 1	Code 1 indicates that the customer is unable to use the microcode or that the problem results in a critical impact on his operations. In either case, an immediate solution is required.

Item	Description	Explanation
	Code 2	The user is able to use the microcode, but the operation is severely restricted.
	Code 3	The user is able to use the microcode with a limited function that is not critical to the overall operation.
	Code 4	A circumvention has been found. the MTR is evaluated, and action is taken as dictated by the problem.
		Note: If this block is left blank, severity code 3 is assigned.
(L)	Type of application	Enter the application type: APL BASIC Include the feature name if applicable.
(M)	System type and configuration	CPU: Enter 5110. Controller Storage Size: Enter 5110 read/write storage size. Leave remaining boxes blank.
(N)	Microcode in error	Not applicable.
(P)	Materials submitted with the MTR	Materials listed on the MTR that are applicable to the 5110 and any other materials and information that the customer engineer believes will be helpful in the resolution of the problem should be submitted. (See <i>Collecting Information to Support the MTR.</i>)
(Q)	Special activities	This block is left blank unless special instructions are available for its use.
(R)	Symptom code	AI
(S)	Failure keyword	APL BASIC Feature name
(T)	Abstract	Up to 66 characters and spaces to describe the problem.

Item	Description	Explanation
Ⓥ	Error description text	<p>The problem description should contain three major items:</p> <ul style="list-style-type: none"> • Conditions required to produce the problem • External logic leading to the failure • Identification of any bypass, circumvention, or relief given <p><i>Note:</i> If additional space is required, use additional MTR forms. Indicate the original customer number and page number on the additional forms. Attach the additional forms to the original form.</p>
Ⓦ	Submitter's name and signature	The person submitting the MTR should print his name above or below his signature.

COLLECTING INFORMATION TO SUPPORT THE MTR

When you submit an MTR, collect as much information about the problem and about the system as possible. A trouble that requires an MTR is usually repeatable, but the problem might require identical conditions.

When you submit an MTR, always send the following information in addition to the information required in the form:

- A dump of lower read/write storage
- A copy of the ROS module EC levels
- A list containing the total system configuration at the time of the trouble
- A tape or diskette copy of the remainder of read/write storage contents at the time of the trouble

With the customer's permission, send a copy of the customer's user-defined function or program. If the trouble is data sensitive, also send a copy of the failing data. Include with the customer's property (the copy of the program or function and data) instructions for the system setup, if appropriate. Also include a description of the intended use or purpose of the failing program or function.

DUMPING LOWER READ/WRITE STORAGE

The first 512 bytes of read/write storage can be dumped only if a printer is available. Do the following:

1. Prepare the printer.
2. Press and hold CMD and press HOLD.
3. Press and hold CMD and press the divide key (/ ÷ on the numeric pad).

The data from the dump reflects the contents of storage at the time of the failure in the event of a system error. (Level 3 registers were used and changed because the keyboard was used to initiate the dump procedure.)

Use the DCP I/O routine to copy the remainder of read/write storage contents. Use hex 0600 for the starting address. Display the contents of hex 00AA for the ending address. See the *IBM 5110 Computer Maintenance Information Manual* for instructions for using the DCP I/O routine.

Several data recovery routines are available to the user in the utilities tape or diskette. See the *IBM 5110 Customer Support Functions Reference Manual* for instructions on the use of these routines. In addition, there are several techniques that you can use to recover information stored on tape or diskette.

If a tape or diskette file is a record-oriented file, and an individual record or a group of records is defective, you can recover the records preceding and following the defective area by referencing them with a READ FILE statement (BASIC). Use the REC= clause to access the records that are not defective.

If the header of a tape file is defective, manually advance the tape beyond the end of the defective file. Files physically beyond the defective file can now be accessed.

If you can determine the format of a bad record in an APL record-oriented diskette file, you can recover the remaining records and create a new file, reserving space for the defective record and maintaining the same record numbers and sequence. Manually offer three shared variables, two for input (such as CTLI and DATI) and one for output (CTLO). Open the input file by assigning INR to CTLI. Open the output file using OUTF. Read the first record by assigning 0,0,1 to CTLI. If the return code is 00, signifying a good read, assign DATI to CTLO to write the record to the new file. Then read the second record by assigning 0,1,1 to CTLI. Check the return code, and, if the read is good, write the record to the new file as before. Continue reading, incrementing the record number, until the bad record is found. Enter a dummy record, and assign the dummy record to CTLO to write the dummy record. Note the defective record number so that the user can update the defective record (dummy record) when the information is available.

This page intentionally left blank.

Appendix A. Graphics and Code Translation Tables


The tables that follow are useful when you display data from tape or diskette. The contents of tape and diskette files can be displayed if you use the DCP I/O routine (read the file to read/write storage) and the diagnostic display function. Tape is normally written in ALC. Diskette data is usually in EBCDIC. However, in nontranslate mode, diskette can be written in Z-code. Both tape and diskette can be written in APL internal representation.

DOMESTIC GRAPHICS TABLE

This chart contains the graphic characters that can be printed and displayed. The characters are arranged in EBCDIC order, with rows keyed to the first hexadecimal digit, and with columns keyed to the second hexadecimal digit of a halfword. The first four rows and hex FF contain unprintable characters that can be displayed.

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0	°	◊	◊	◊	◊	◊	◊	◊	◊	◊	◊	◊	◊	◊	◊	◊
1	◊	◊	◊	◊	◊	◊	◊	◊	◊	◊	◊	◊	◊	◊	◊	◊
2	◊	◊	◊	◊	◊	◊	◊	◊	◊	◊	◊	◊	◊	◊	◊	◊
3	◊	◊	◊	◊	◊	◊	◊	◊	◊	◊	◊	◊	◊	◊	◊	◊
4		A	B	C	D	E	F	G	H	I	¢	.	<	(+	!
5	&	J	K	L	M	N	O	P	Q	R	!	\$	*)	;	-
6	-	/	S	T	U	V	W	X	Y	Z	!	,	%	_	>	?
7	&	^	"	Δ	±	∅	~	~	v	\	:	#	@	'	=	"
8	~	a	b	c	d	e	f	g	h	i	↑	↓	≤	Γ	L	→
9	□	j	k	l	m	n	o	p	q	r	◊	◊	◊	◊	◊	◊
A	-	~	s	t	u	v	w	x	y	z	◊	◊	◊	◊	◊	◊
B	α	ε	ι	ρ	ω	◊	x	\	÷	◊	◊	Δ	τ	◊	≠	!
C	<	A	B	C	D	E	F	G	H	I	Σ	Σ	Σ	Φ	Υ	◊
D	>	J	K	L	M	N	O	P	Q	R	◊	!	◊	◊	◊	◊
E	\	Σ	S	T	U	V	W	X	Y	Z	/	\	h	◊	◊	◊
F	0	1	2	3	4	5	6	7	8	9	!	◊	◊	◊	◊	◊

The displayed, but unprintable characters can easily be translated into EBCDIC. The bit values are as shown in the illustration to the right. Marks above the midline represent the first hexadecimal digit, and marks below the midline represent the second hexadecimal digit.

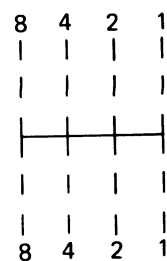

WORLD TRADE GRAPHICS TABLE

Only the characters that differ from domestic characters are contained in this chart.

Country	Hex Position											
	4A	5A	5B	5F	6A	79	7B	7C	A1	C0	D0	E0
Austria/Germany	Ä	Ü	\$	^	ö	˘	#	§	ß	ä	ü	ö
Belgium	[]	\$	^	ü	˘	#	ä	˘	è	é	ç
Brazil	Ê	\$	Ç	^	ç	ã	õ	ã	˘	õ	è	\
Denmark/Norway	#	ø	Å	^	ø	˘	Æ	ø	ü	æ	å	\
Finland/Sweden	§	ø	Å	^	ö	è	Ä	Ö	ü	ä	å	Ê
France	°	§	\$	^	ü	˘	£	ä	˘	è	é	ç
Italy	°	è	\$	^	ö	ü	£	§	˘	ä	é	ç
Japan	£	!	¥	˘	!	˘	#	@	˘	{	}	\$
Portugal	[]	\$	^	õ	˘	Ä	Ö	ç	ä	˘	Ç
International	[]	\$	^	!	˘	#	@	˘	{	}	\
Spain	[]	£	˘	ñ	˘	Ñ	@	˘	{	}	\
Spanish Speaking	[]	\$	˘	ñ	˘	Ñ	@	˘	{	}	\
United Kingdom	\$!	£	˘	!	˘	#	@	˘	{	}	\
French Canadian	ä	˘	\$	^	ü	˘	#	@	˘	è	é	ç
EBCDIC	ç	!	\$	˘	!	˘	#	@	˘	{	}	\

CODE TRANSLATION TABLE IN EBCDIC SEQUENCE

CODE TRANSLATION IN EBCDIC SEQUENCE (Continued)

				1 EBCDIC in Hexadecimal											
				2 Atomic Vector In Decimal (IO+1)											
				3 Z Code in Hexadecimal											
				4 ALC in Hexadecimal											
1	2	3	4	1	2	3	4	1	2	3	4	1	2	3	4
80	55	36	40	A0	152	97	49	C0	213	D4	78	E0	251	FA	79
81	187	BA	A5	A1	248	F7	9F	C1	87	56	01	E1	227	E2	A2
82	188	BB	A6	A2	205	CC	B8	C2	88	57	02	E2	105	68	13
83	189	BC	A7	A3	206	CD	B9	C3	89	58	03	E3	106	69	14
84	190	BD	A8	A4	207	CE	BA	C4	90	59	04	E4	107	6A	15
85	191	BE	A9	A5	208	CF	BB	C5	91	5A	05	E5	108	6B	16
86	192	BF	AA	A6	209	D0	BC	C6	92	5B	06	E6	109	6C	17
87	193	C0	AB	A7	210	D1	BD	C7	93	5C	07	E7	110	6D	18
88	194	C1	AC	A8	211	D2	BE	C8	94	5D	08	E8	111	6E	19
89	195	C2	AD	A9	212	D3	BF	C9	95	5E	09	E9	112	6F	1A
8A	56	37	45	AA	60	3B	2F	CA	69	44	67	EA	75	4A	5D
8B	57	38	41	AB	61	3C	42	CB	70	45	68	EB	76	4B	5E
8C	38	25	4B	AC	51	32	2E	CC	215	D6	62	EC	217	D8	74
8D	32	1F	3F	AD	15	0E	29	CD	50	31	59	ED	74	49	5A
8E	33	20	30	AE	40	27	4D	CE	216	D7	63	EE	77	4C	64
8F	23	16	54	AF	65	40	36	CF	63	3E	5B	EF	78	4D	6B
90	66	41	38	B0	43	2A	2D	D0	214	D5	7E	F0	141	8C	1B
91	196	C3	AE	B1	44	2B	31	D1	96	5F	0A	F1	142	8D	1C
92	197	C4	AF	B2	45	2C	35	D2	97	60	0B	F2	143	8E	1D
93	198	C5	B0	B3	46	2D	3E	D3	98	61	0C	F3	144	8F	1E
94	199	C6	B1	B4	47	2E	43	D4	99	62	0D	F4	145	90	1F
95	200	C7	B2	B5	226	E1	A0	D5	100	63	0E	F5	146	91	20
96	201	C8	B3	B6	29	1C	27	D6	101	64	0F	F6	147	92	21
97	202	C9	B5	B7	21	14	51	D7	102	65	10	F7	148	93	22
98	203	CA	B6	B8	30	1D	53	D8	103	66	11	F8	149	94	23
99	204	CB	B7	B9	229	E4	A1	D9	104	67	12	F9	150	95	24
9A	59	3A	44	BA	156	9B	33	DA	64	3F	65	FA	218	D9	7C
9B	58	39	46	BB	113	70	34	DB	49	30	60	FB	161	A0	61
9C	223	DE	9D	BC	52	33	3A	DC	73	48	69	FC	228	E3	A3
9D	53	34	3B	BD	16	0F	2A	DD	72	47	6A	FD	68	43	5C
9E	231	E6	9E	BE	42	29	4F	DE	67	42	5F	FE	79	4E	6C
9F	22	15	28	BF	34	21	39	DF	71	46	66	FF	256	FF	A4

CODE TRANSLATION TABLE IN ATOMIC VECTOR AND Z-CODE SEQUENCE

CODE TRANSLATION TABLE IN ATOMIC VECTOR AND Z-CODE SEQUENCE (Continued)

				1	EBCDIC in Hexadecimal																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																</
--	--	--	--	----------	-----------------------	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	----

CODE TRANSLATION TABLE IN ALC SEQUENCE

CODE TRANSLATION TABLE IN ALC SEQUENCE (Continued)

				</											



,

,



,

,



⏏ 6

↑ 10

↕ 10

--- 10

* 10

** 10

/ 10

⏏EX 12

⏏LC 12

⏏WA 12

⏏: 6

⏏← 9

)CONTINUE command 10

)COPY command 4

)ERASE command 11

)FNS 11

)LOAD command 11

)PCOPY command 4

)SAVE command 4

)SI 11

)SINL 11

)SYMBOLS 11, 12

)VARS 11

)WSID command 11

arithmetic hierarchy 10

change number of symbols allowed 11

change workspace ID 11

clear storage 3

code translation tables 27

collecting information to support the MIR 23

copy IMFs 15

copy programs 4

data recovery 25

delete a statement 8

diagnostic tools 3

display ECs 16

display function names 11

display global names 11

display intermediate results 9

display next statement number 12

display number of symbols 9

display the variables 9

dumping lower read/write storage 24

erase objects 11

graphic tables 27

hierarchy 10

IMF problem number 14

IMF (internal machine fix) 13

insert a statement 8

key-enter IMF 16

language diagnostic tools 3

load a continued file 12

load IMFs 14

load programs 3

LOADER FUNCTION 13

MERGE command 4

microcode trouble report 19

MIR 19

MIR form 19

MIR mailing address 20

MIR (microcode trouble report) 13

PAUSE 6

print listings 4

program trace 5

replace a statement 7

resume program execution 7

SAVE command 4

save storage contents 4

STWP 6

STOP 6

suspend execution 6

TRACE 5

verify a name is available 12



READER'S COMMENT FORM

Please use this form only to identify publication errors or request changes to publications. Technical questions about IBM systems, changes in IBM programming support, requests for additional publications, etc, should be directed to your IBM representative or to the IBM branch office nearest your location.

Error in publication (typographical, illustration, and so on). No reply.

Page Number Error

Inaccurate or misleading information in this publication. Please tell us about it by using this postage-paid form. We will correct or clarify the publication, or tell you why a change is not being made, provided you include your name and address.

Page Number Comment

Note: All comments and suggestions become the property of IBM.

Name _____

Address _____

● No postage necessary if mailed in the U.S.A.

Cut Along Line

Fold

Fold



NO POSTAGE
NECESSARY
IF MAILED
IN THE
UNITED STATES

BUSINESS REPLY MAIL


FIRST CLASS

PERMIT NO. 40

ARMONK, N.Y.

POSTAGE WILL BE PAID BY ADDRESSEE:

IBM Corporation
General Systems Division
Development Laboratory
Publications, Dept. 245
Rochester, Minnesota 55901

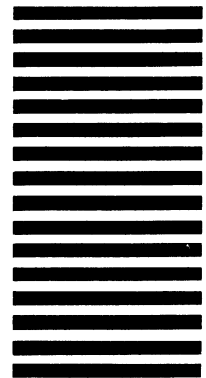

IBM 5110 Language Support Maintenance Information Manual

Printed in U.S.A.

SY31-0581-0

Fold

Fold



International Business Machines Corporation

**General Systems Division
4111 Northside Parkway N.W.
P.O. Box 2150
Atlanta, Georgia 30301
(U.S.A. only)**

**General Business Group/International
44 South Broadway
White Plains, New York 10601
U.S.A.
(International)**

READER'S COMMENT FORM

Please use this form only to identify publication errors or request changes to publications. Technical questions about IBM systems, changes in IBM programming support, requests for additional publications, etc, should be directed to your IBM representative or to the IBM branch office nearest your location.

Error in publication (typographical, illustration, and so on). No reply.

Page Number Error

Inaccurate or misleading information in this publication. Please tell us about it by using this postage-paid form. We will correct or clarify the publication, or tell you why a change is not being made, provided you include your name and address.

Page Number Comment

Note: All comments and suggestions become the property of IBM.

Name _____

Address _____

● No postage necessary if mailed in the U.S.A.

Cut Along Line

Fold

Fold



NO POSTAGE
NECESSARY
IF MAILED
IN THE
UNITED STATES

BUSINESS REPLY MAIL


FIRST CLASS

PERMIT NO. 40

ARMONK, N.Y.

POSTAGE WILL BE PAID BY ADDRESSEE:

IBM Corporation
General Systems Division
Development Laboratory
Publications, Dept. 245
Rochester, Minnesota 55901

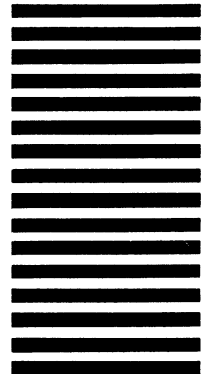

IBM 5110 Language Support Maintenance Information Manual

Printed in U.S.A. SY31-0581-0

Fold

Fold



International Business Machines Corporation

**General Systems Division
4111 Northside Parkway N.W.
P.O. Box 2150
Atlanta, Georgia 30301
(U.S.A. only)**

**General Business Group/International
44 South Broadway
White Plains, New York 10601
U.S.A.
(International)**



International Business Machines Corporation

General Systems Division
4111 Northside Parkway N.W.
P.O. Box 2150
Atlanta, Georgia 30301
(U.S.A. only)

General Business Group/International
44 South Broadway
White Plains, New York 10601
U.S.A.
(International)

IBM 5110 Language Support Maintenance Information Manual Printed in U.S.A. SY31-0581-0